



**HANDBOOK FOR OVER-AND-UNDER SHOTGUNS
MODELS 100-100L-200-200L-SP4**

- Edition 01.2021-

Specifications	pag. 2
Instructions	pag. 3
Important notes	pag. 4
General recommendations	pag. 4

THESE SHOTGUNS ARE FOR USE BY EXPERT HUNTERS ONLY

**ANY REPAIRS MUST BE CARRIED OUT BY THE INVESTARM SERVICE
CENTRE**

**THE INSTRUCTIONS, NOTES AND RECOMMENDATIONS IN THIS
HANDBOOK MUST BE READ AND UNDERSTOOD BEFORE USING THE
GUN**

**THIS HANDBOOK MUST BE KEPT TOGETHER WITH THE GUN, EVEN IF IT
CHANGES OWNERSHIP**

**COPY OF THIS MANUAL IS AVAILABLE AT INVESTARM ON REQUEST, OR
ON THE WEBSITE WWW.INVESTARM.IT**

Pag. 1

INVSTARM SRL

Via Zanardelli, 210 - 25060 Marcheno (BS) Italia

info@investarm.it – www.investarm.it - Telefono (+39) 030 8960105 - Fax (+39) 030 861285

P.iva 00565130986 - CF 00467520177 - Capitale Sociale € 105.000,00 i.v. - Reg. Imprese Brescia
00467520177

SPECIFICATIONS

- Opening: lever, in the head of the action
- Safety: button-operated, manual or automatic, on the tail end of the action
- Cartridge ejection: manual.
- Stock and barrel sleeve:
 - walnut, knurled in models 100L and 200L;
 - beech, knurled in models 100 and 200.
- Barrels:
 - with ventilated rib;
 - with or without internal chroming.
- Action: chromed or blued, engraved or smooth.
- Firing: single-trigger or double-trigger.

Models 100 and 100L

- Action: chromed or blued, engraved or smooth.
- Barrels length: 71, 76, 81 cm.
- Gauges: 12, 20, 28, 410, 9 Flobert, 8 C.F.
- Combos: 20/28, 20/410, 28/410, 20/8, 28/8, 410/8.

Models 200 and 200L

- Opening by rotation.
- Gauge: 12.
- Barrel length: 71, 76, 81 cm.

INSTRUCTIONS

- The opening lever moves the closing bolt and cocks the hammers at the same time. It is important to hold the gun correctly. Push the lever to open up the gun.
- If you want to **open the gun**:
 - push the lever **as far as it will go (nearly 90°)**;
 - open the gun, keeping the lever pushed;
 - release the lever, which will stop after a short rotation.
- Pushing the lever as far as it will go (nearly 90) cocks the **hammers fully** and the gun is ready to fire. If this is not done properly, the gun may misfire.
- **Do not pull the trigger after opening up the gun.**
- If you do this by mistake, push the opening lever again as far as it will go, as if you wanted to open the gun. This is to avoid the risk of faulty operation of the firing mechanism. Engagé the safety in the manual type.
- Check the position of the safety button in the automatic type, which engages when the gun is opened. In both cases, to engag e the safety, push the safety button back as far as it will go towards safety position. When it is in position and the safety is on, the letter S is visible in front of it. When the safety is on, do not exert force on the trigger as this could deform it and cause a malfunction.
- Insert in the chambers, cartridges of a gauge and length appropriate to the barrel characteristics. This operation must be done with extreme care, especially if the barrel has two combo gauges.
- Close the gun, keeping your right hand behind the safety button to prevent the opening lever from injuring your hands as it returns to the centre position.
- If, with the gun open, you push the spring pin projecting from the front of the action, the opening lever will return to the centre position. The gun cannot be closed when it is in this condition. First you have to push the lever as far as it will go, as if to open the gun.

IMPORTANT NOTES

- Check the gun carefully before each firing session.
- Read the barrel gauge and the chamber length on the plate and use appropriate cartridges. Extra care must be taken when using barrels with two combo gauges.
- Only use original cartridges, never recharged ones.
- Before loading or firing the gun, make sure the barrel is not obstructed in any way.
- Always make sure the safety is on until you are ready to fire. If the safety is not exactly in position, it may not prevent the gun from firing. Clean and lubricate the gun after each firing session to prevent the metal parts from rusting and corroding.
- If the gun gets damaged or is faulty, do not attempt to strip it yourself. Take it to a qualified gun shop where it can be repaired using original spares.
- If you are unclear about any of the instructions, consult a qualified weapon instructor. Please write to us if you have any questions or there is anything you do not understand about the gun.

GENERAL RECOMMENDATIONS

1. Use all firearms with caution and respect.
2. Keep the safety on and keep your eye on the muzzle until you are ready to fire.
3. When the gun is not in use, keep it unloaded and open.
4. Check the barrel is not obstructed.
5. Ascertain the target you wish to fire at. Be able to recognize the game you are hunting.
6. Never fire toward flat surfaces or water.
7. Never attempt to climb a tree, climb over a hedge or jump a ditch with the gun loaded, and never pick up the gun by the barrel.
8. Do not point the gun at anything you do not intend to fire at and never play with it.
9. Store guns and ammunition separately and make sure they are not accessible to children. Guns must always be kept unloaded.
10. Avoid consuming alcohol before and when using guns.